


Special adapter allows contamination-free discharge of FIBCs

Andocksystem, Badenweiler, Germany, has released further information about its novel FLECOZIP flexible docking system (see www.eurobulksystems.com, week of 28 February 2011). This relates to the capability of a FLECOZIP adapter to connect to a tubular film nozzle, a typical application being the discharge of bulk bags in a contamination-free

manner. After the loading process has been completed, the outlet connection can be crimped directly below the FLECOTRIC and thereby be hermetically sealed. This then allows safe removal of the outer ring of the FLECOTRIC allowing it to be used for further loading tasks. The device will be on show at Interpack, Hall 5, Stand E30.

www.andocksysteme.de

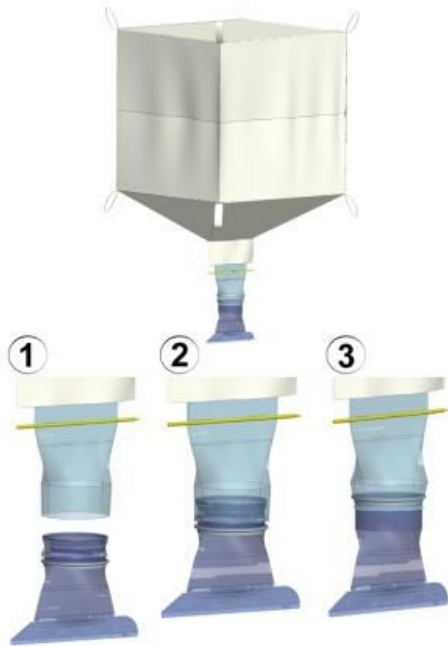

FLECOTRIC adapter from Andocksysteme pre-tailored in standard format (1); in the event of direct connection to an FIBC discharge spout, the spout is also put over the inner ring of the FLECOTRIC adapter (2) before the outer ring, then it is put over the inner ring and fixed (3)